



INSTALLATION INSTRUCTION FOR ST-EDTBAR(F) #1100 SERIES FIRE EXIT DEVICE

BEFORE INSTALLING DEVICE, PLEASE CHECK :

- 1 IF DOOR FITTED AND HUNG.
- 2 SIZE OF EXIT DEVICE, FUNCTION AND DESIGN.
 - 2.1 36" DOORS, CAN BE CUT TO FIT DOORS DOWN TO 30" WIDE
 - 2.2 48" DOORS, CAN BE CUT TO FIT DOORS DOWN TO 36" WIDE
 - 2.3 HAND OF DEVICE AGAINST APPLICATION


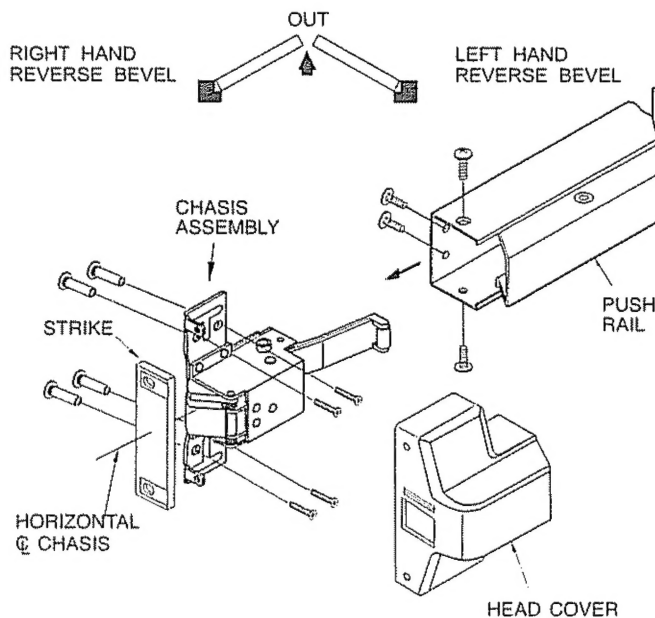


1. TYPE OF INSTALLATION

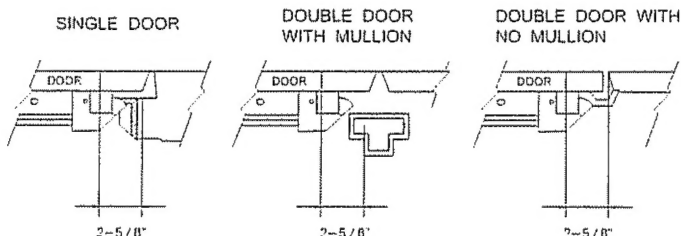


2. APPLY HARDWARE

- 2.1 DRILL HOLES
MARK DOOR FACE AND DRILL HOLES IN ACCORDANCE WITH THE DIAMETERS SUGGESTED SEE ATTACHED TEMPLATE

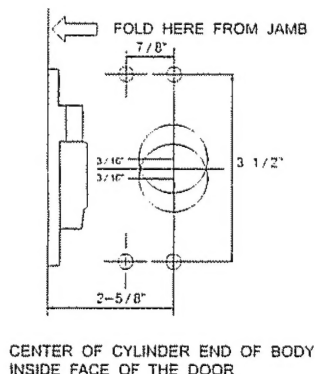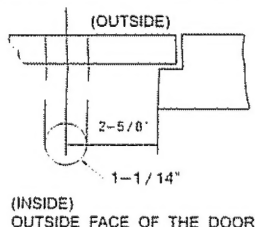


2.2 INSTALL CYLINDER


OUTSIDE FACE OF THE DOOR

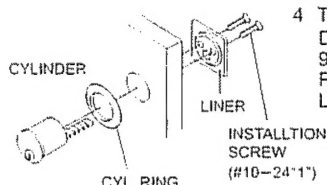

- 1 INSERT THE CYLINDER THROUGH CYL RING THE HOLE ON THE DOOR.
- 2 KEEP THE TAIL PIECE HORIZONTAL
- 3 MOUNT LINEER ON INSIDE OF DOOR AND
- 4 TAILPIECE PROJECTION OVER INSIDE OF DOOR IS SUGGESTED IN THE RANGE 9/32\"-15/32\". IF NECESSARY, USE A PLIER TO BEND AND CUT TO DESIRED LENGTH




2.3 INSTALL LEVER, OR KNOB, OR PULL TRIM

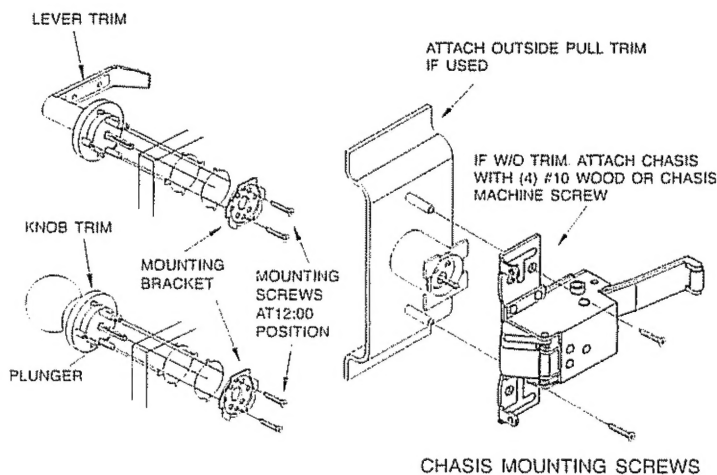


3. APPLY RAIL ASSEMBLY

- 1 CHECK THE SIZE OF DEVICE, IF CUTTING TO LENGTH IS REQUIRED
- 2 DETERMINE CUT OFF LENGTH "X" BY SUBTRACTING 1 3/4" FROM "Y" MARK CUT OFF POINT ON MOUNTING RAIL
- 3 DEPRESS ARM INTO RAIL OPENING AND SLIDE RAIL ONTO CHASIS LEVEL RAIL AND FASTEN CHASIS AND MOUNTING PLATE

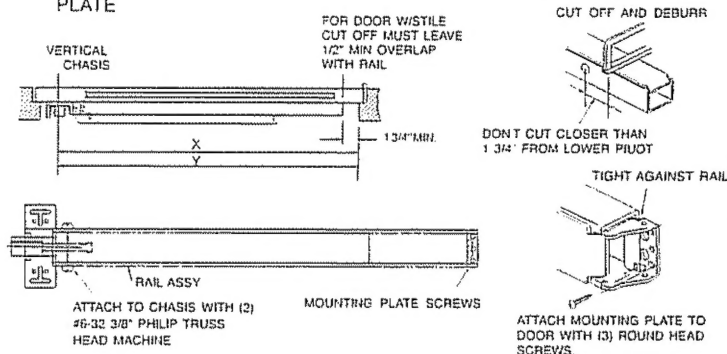

4. APPLY COVER AND STRIKES

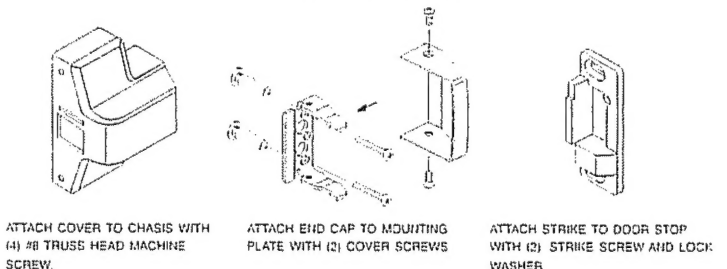

TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM


FOR WOOD DOORS :

DRILL(4) 3/32" DIA.X 1-1/4"

DEEP PILOT HOLES

FOR METAL DOORS :


TAPPED(4)#3/16" HOLES.

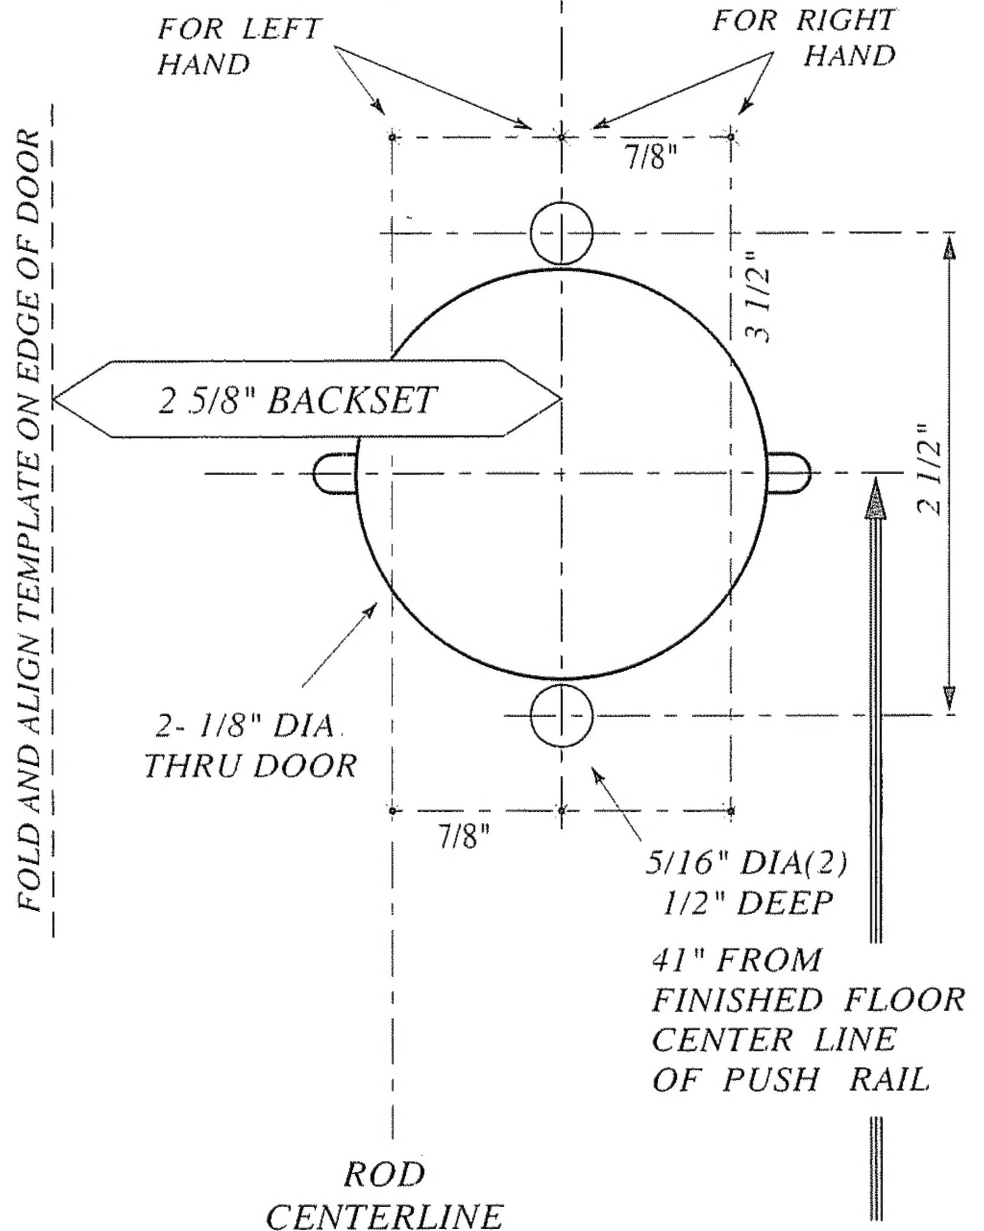

① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET

TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE
USING LEVER HANDLE TRIM
OR ON TRIMS

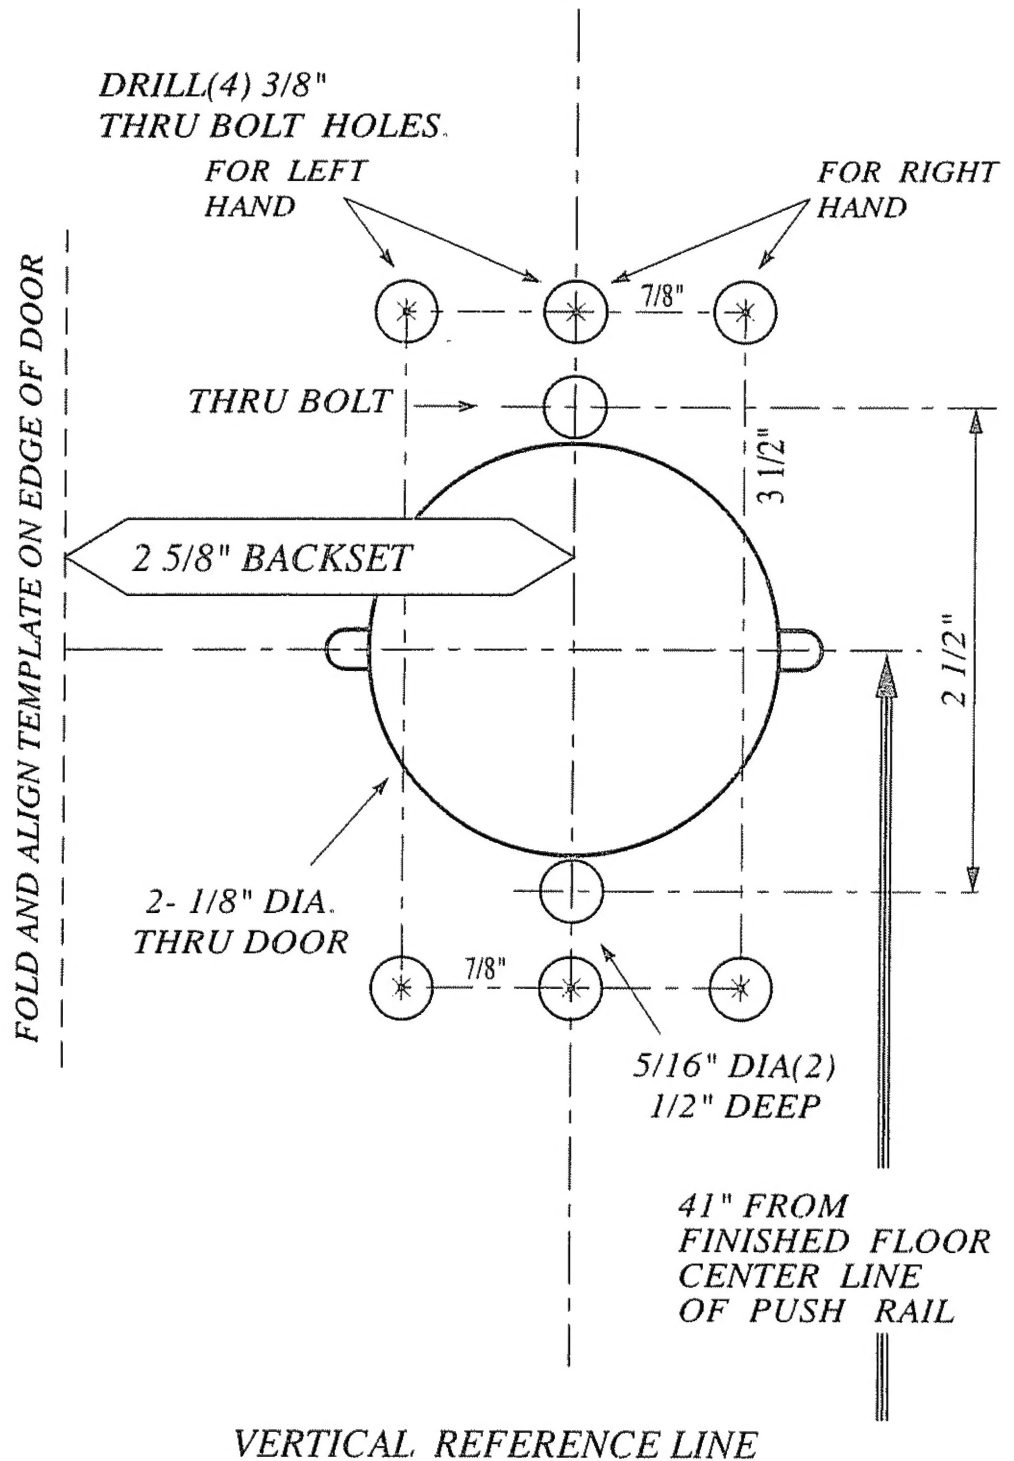


① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET

FC-8000# PH 26A

TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM

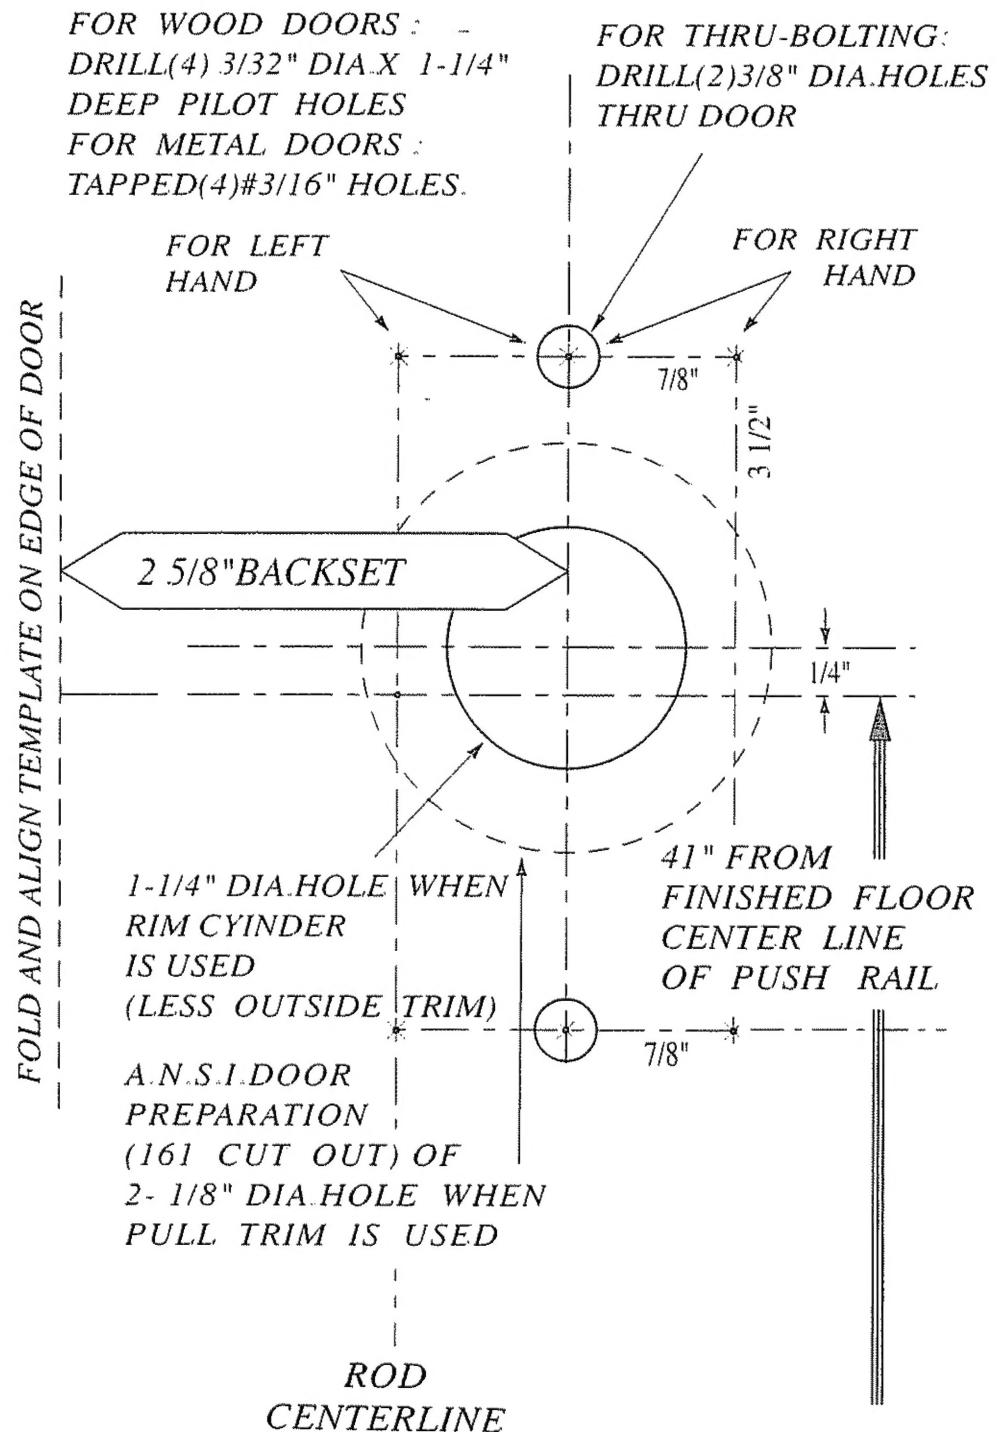

① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET